


PERSONNEL CARRIER

**ACTION
man**

Cat. No. 34708

Assembly instructions

- A) Clip in mine sweeper wheels
- B) Insert shaft (1) through holes (2) in mine sweeper until end of shaft protrudes approximately 1/2"
- C) Insert post (3) of shaft (1) into hole (4) until unit is fully seated
- D) Insert machine gun turret (5) into turret well (6)
- E) Snap posts (7) of cannon (8) into holes (9) until secure, then push cannon shaft (10) into slot (11)

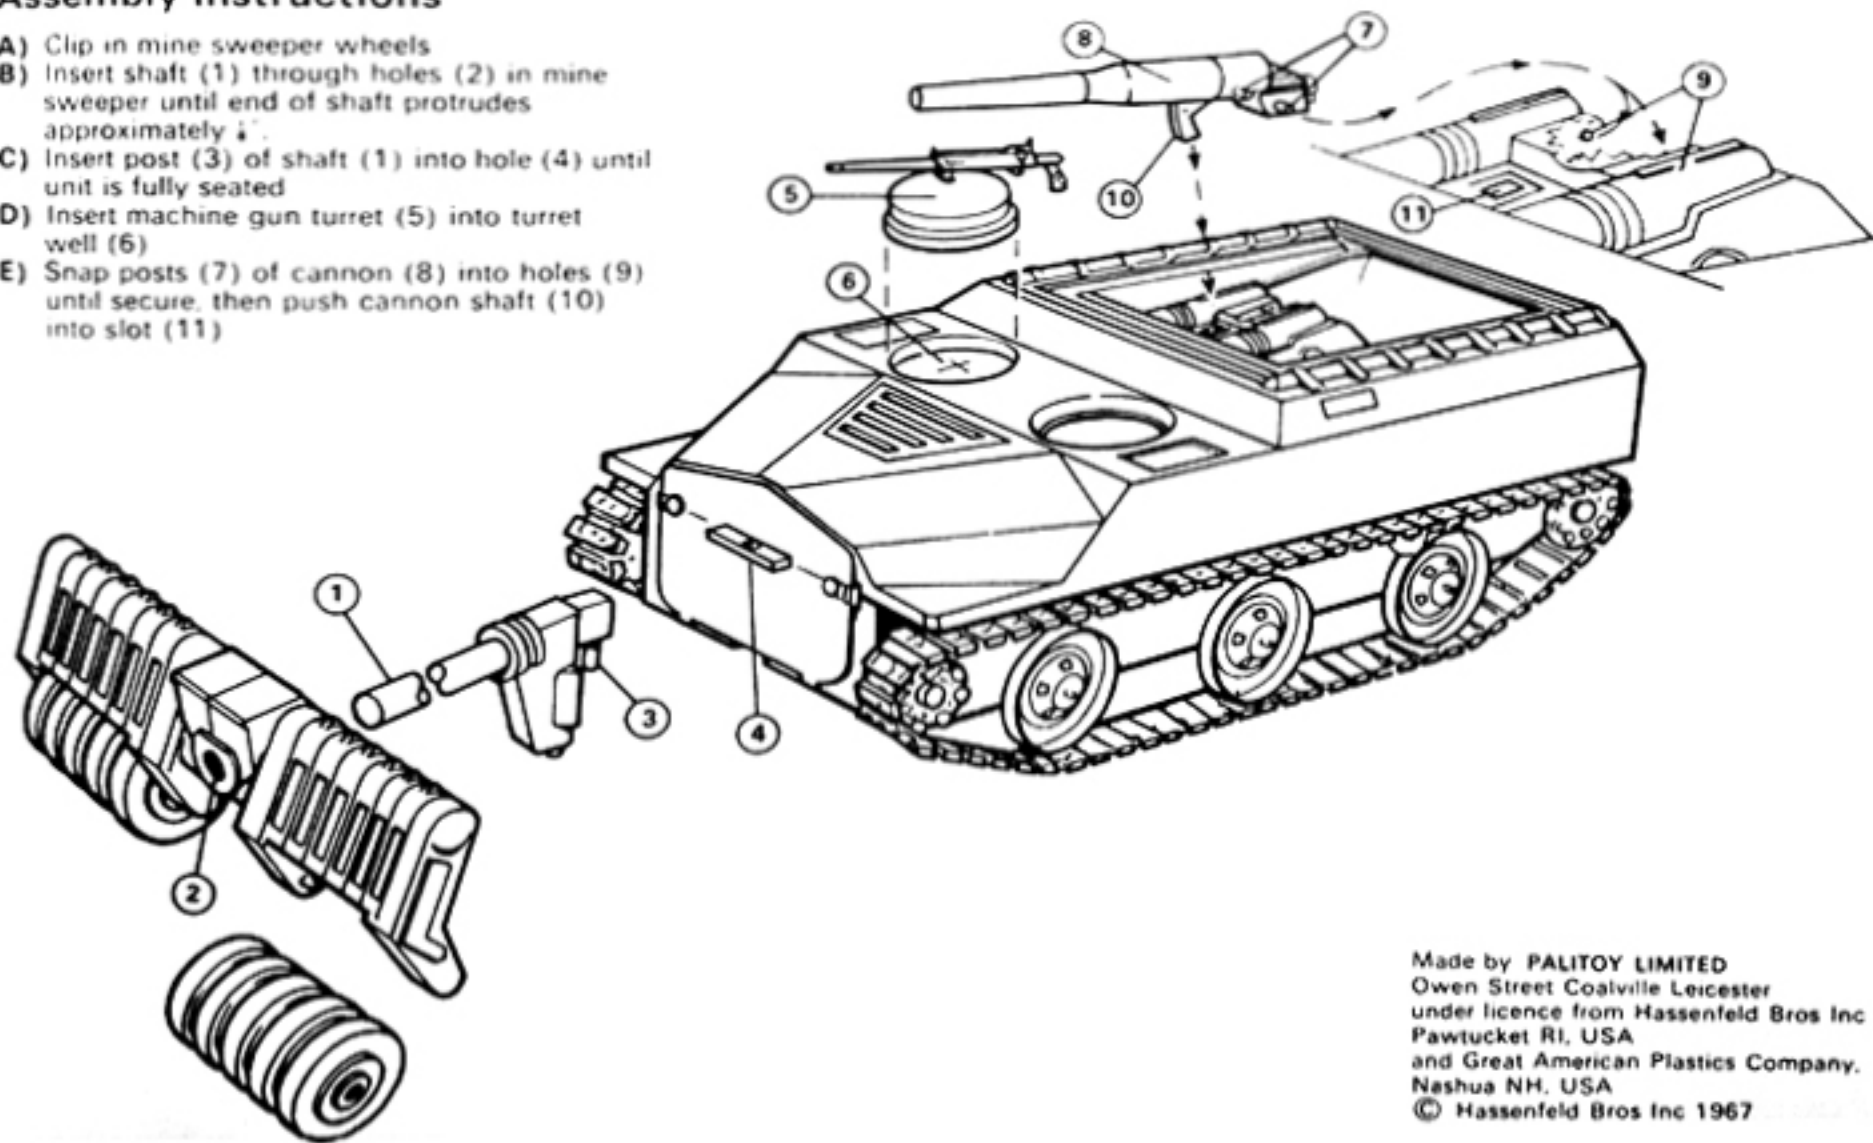

Made by PALITOY LIMITED
Owen Street Coalville Leicester
under licence from Hassenfeld Bros Inc
Pawtucket RI, USA
and Great American Plastics Company,
Nashua NH, USA
© Hassenfeld Bros Inc 1967